

## WARRANTY STATEMENT

---

During the applicable warranty period, any Total Protection Solutions™ surge protector device which fails due to defect in materials, workmanship, or any electrical anomaly, including lightning, shall be repaired or replaced at TPS's discretion without charge. The applicable warranty period for the TPS surge protective device is outlined below in the Warranty Period section. The warranty period for any repaired devices or replacement devices will be only the remaining portions of the original limited warranty.

Within a reasonable time, but in no case to exceed forty-five (45) days, user shall contact Company's customer service department and obtain a Return Material Authorization (RMA) before returning any products. User shall ship the product(s), with proof of purchase, to Company freight prepaid.

The Company shall have no liability under this warranty for problems or defects directly or indirectly caused by misuse of the Product, alteration of the Product (including removal of any warning labels), accidents, improper installation, application, operation or improper repair of the Product.

THIS WARRANTY REPRESENTS THE ENTIRE WARRANTY OF THE COMPANY. ALL OTHER WARRANTIES EXPRESS OR IMPLIED, ORAL OR WRITTEN, INCLUDING, BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

The liability of the Company, at its sole option, under this warranty is expressly limited to the replacement or repair of the defective part thereof. IN NO EVENT SHALL THE COMPANY BE LIABLE OR RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND OR CHARACTER, NOR SHALL ITS LIABILITY EVER EXCEED THE PURCHASE PRICE PAID TO COMPANY FOR SUCH DEFECTIVE PRODUCT.

This warranty is not transferable and may only be enforced by the original purchaser. Claims under this warranty must be submitted to Total Protection Solutions, LLC. within thirty (30) days of discovery of any suspected product defect.

Warranty Period    TK-CT2-LIT    Ten Years Unlimited Free Replacement

## SAVE THESE INSTRUCTIONS

---

Note: If devices are received damaged, notify the shipping company immediately. Retain containers and packing materials for inspection.

Total Protection Solutions, LLC.  
P.O. Box 3760, Winter Park, FL 3760  
TEL:800-647-1911 www.TPSSurge.com



# ComTrack™

---

## Surge Protection Device

---

## ComTrack™ LIT Low Voltage Units

## Installation Operation and Maintenance Manual

## CAUTION - IMPORTANT SAFETY INSTRUCTIONS

1. Never install during a lightning storm.
2. This product is for **INDOOR USE ONLY**.
3. LIT Series of suppressors are intended for use as primary protectors for power and/or data lines.
4. Read and understand all instructions prior to installation and operation.

## INSTALLATION

The **LIT Series** of products is easy to install. The following instructions clearly explain each step:

**NOTE:** Make sure you follow the installation instructions exactly; if the suppressor is improperly installed, the current limiting feature could be rendered inoperable.

### **LIT Terminal Block Interface Models:**

1. Connect the Load (protected) Side of the **LIT Series** product to your processor/equipment using straight wire hookups as short as possible.
2. Connect your incoming (unprotected) wires / cable to the Line (unprotected/exposed) Side of the **LIT Series** product.
3. Connect a #14 AWG ground wire from the unit's ground stud and secure it to the nearest available chassis ground.

## GROUNDING

The unit's ground stud must be connected to the ground reference used by the system being protected. In a computer room environment this grounding point may be the ground bar in the AC power panel. Ground leads longer than 12" are not recommended.

Grounding is accomplished via any of the four corner securing screws on the units. When the din rail clip is used it will pick up a ground connection becoming part of the unit's ground. A ground lug is also provided and can accommodate up to a #10 AWG ground wire. The ground lug can be secured to any one of the four corner screws in order to obtain a ground point.

**NOTE:** It is always best to test grounds to verify their existence before relying on them to protect sensitive equipment.

## PERFORMANCE NOTE

The grounding wire must be as short as possible. Minimize length to the centimeter/inch and use a minimum of No. 14 AWG wire.

## INDEPENDENT GROUNDS

Surge protection devices must not be connected to ground points that are independent of AC ground.

## MOUNTING INFORMATION

The LIT Series is provided with a universal mounting kit and din rail clip. Each unit is provided with a universal mounting bracket and a Din Rail clip(s). The bracket enables units to be mounted in several different planes as shown in the drawings.

The Din Rail clip is not necessary when mounting units to hard surfaces, however should you want to mount the device to a din rail, the clip mates to a standard DIN 35 Rail.

### **LIT 4**

**MATERIALS**  
1 LIT Unit  
1 Din Clip  
1 Mounting Bracket  
1 Screw

#### **Attaching The Din Rail Mounting Clip:**

1. Remove Nut From Desired Stud Location.
2. Spin Din Clip on to the Stud.
3. Replace Nut & Secure.

#### **Attaching The Mounting Bracket:**

1. Remove Nuts From Case Studs.
2. Place Bracket on to Studs.
3. Replace Nuts & Secure.


#### **Combination Use: Mounting Bracket & Din Rail Clip:**

1. Secure Din Clip To Mounting Bracket With Hardware Provided
2. Remove Nuts From Case Studs.
3. Place Bracket onto Studs.
3. Replace Nuts & Secure.

### **LIT 12**

#### **Installed Dimensions:**


**2.7" Depth from top of Ground Lug**

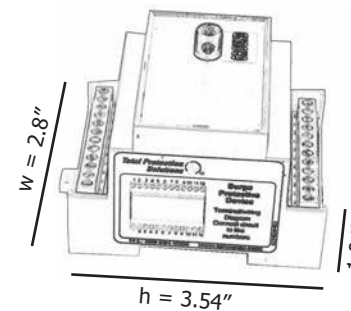

### **LIT 24**

#### **Installed Dimensions:**

**2.8" Depth from top of Terminal Blocks**

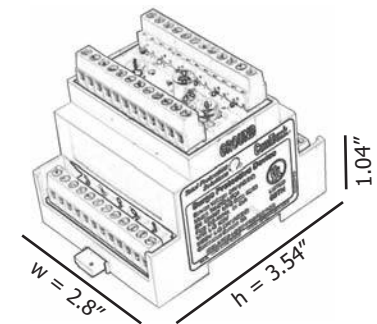

## WARNING

Should your equipment or building be subject to a direct lightning strike, this product will not provide complete protection.

**NOTE:** The protected device/equipment should also have AC protection because it is still vulnerable to transients on the power lines. Omitting AC protection poses a continued threat of failures at the communication interface.